

> Technical Sheet

EVERLITE

LIGHTNESS
OF MOVEMENTS



EVERLITE 01

Blue
35 - 47



EVERLITE 02

Navy Blue
35 - 47



EVERLITE 03

White
35 - 47



EVERLITE 04

Black
35 - 47



EVERLITE 05

Orange
35 - 42



EVERLITE 06

Purple
35 - 42



EVERLITE 07

Fuchsia
35 - 42



EVERLITE 08

Green
35 - 42



EVERLITE CLOSED 01

White
35 - 47



EVERLITE CLOSED 02

Black
35 - 47



CLOSED



Extra protection

• EVERLITE Insole



EVERLITE

LIGHTNESS

OF MOVEMENTS



With **EVERLITE** you can be even more efficient in everything you do.


Description

EVERLITE is an occupational shoe made entirely of polymeric materials and with the following components:





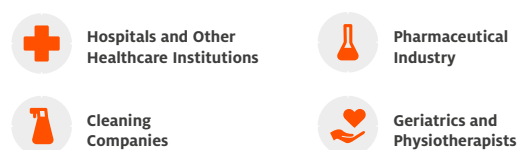


- Antistatic insert;
- Removable insole;
- Ventilation holes — both on clog and insole.

Users

EVERLITE is ideal for uses where prolonged standing or walking may tend to induce foot discomfort or lower body fatigue, especially to be used in:



Specifications

-  **Super Light**
Feelite™ technology produces remarkably light, resistant and comfortable footwear.
-  **Removable Insole**
It's detachable to allow a deeper cleaning.
-  **Shock Absorption**
The special design helps to reduce the occurrence of micro-lesions in tendons, bones and joints, and the feeling of tired legs.
-  **Antistatic**
Promotes the dissipation of accumulated static electricity.
-  **Upper Liquid Protection**
Avoids the entrance of liquids inside the shoe.
-  **Closed Heel**
Additional support for the moments that require extra agility.
-  **Breathable**
Regulates the temperature and humidity of the foot.
-  **Washable**
The footwear can be machine washed up to 50 °C.
-  **Antislip**
The sole is designed to reduce the risk of slipping.
-  **Extra Protection***
Absence of ventilation holes avoiding the entrance of speck to the interior of the footwear.
-  **Unisex**
Style designed to be worn by men and women.




Materials and Technologies

-  **EVERLITE** is made with **Feelite™** technology. Its material is super lightweight and provides odor resistance, inhibits proliferation of bacteria and is non-toxic.

* Only applies to EVERLITE CLOSED.



Technical Standard

-  **CE**
Directive 89/686/EEC.
-  **EN ISO 20347:2012** Clauses 5.2.2; 5.4.2; 5.4.5; 5.8.1.1; 5.8.3; 5.8.4; 6.2.2.2; 6.2.4.
-  **SATRA TM 144:2011** Slip Resistance.
SATRA TM 158:1992 Washability — 50 °C.

Technical Specifications

- Heat resistance — machine washing up to a maximum of 50 °C;
- Slip-resistant;
- Resistant to abrasion;
- Resistant to detergents;
- Resistant to lactic acid;
- Resistant to liquids (such as infiltration of blood);
- Resistant to chemicals;
- Resistant to saltwater;
- Resistant to animal fat.

Care and Cleaning

Wash: Machine washable up to a maximum temperature of 50 °C. Can also be cold sterilization with chlorine, sodium hypochlorite or hydrogen peroxide.

Dry: Wipe with a cloth or dry at room temperature.

Attention

EVERLITE resists several washings at 50 °C in washing machine. It is not recommended the use of bleaching agents during washing machine cycles at 50 °C. The resistance of Feelite™ material to washing depends on several factors:

- Type of detergent;
- Concentration;
- Cycles' duration;
- Temperature;
- Physical stress during the cycles.

Made and designed by:
WOCK® 2019 by Walkemore, S.A.



Zaugg Medical GmbH
Telefon: 043 810 12 50, Telefax: 043 810 12 51
www.zauggmedical.ch



WOCK® is a registered trademark owned by Walkemore, S.A.